


Piglet Flare Assembly Manual


**For videos and more information about your
new Piglet Flare please visit:
<http://www.minihighbanker.com/owners-manual/>**

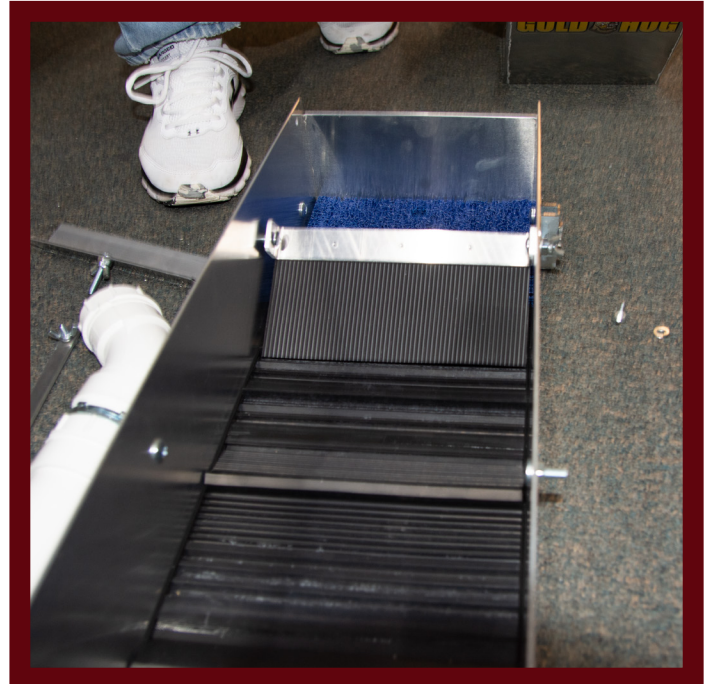


Step 1: Install Dampener Bar



Step 2: Attach Header Box to Sluice Box

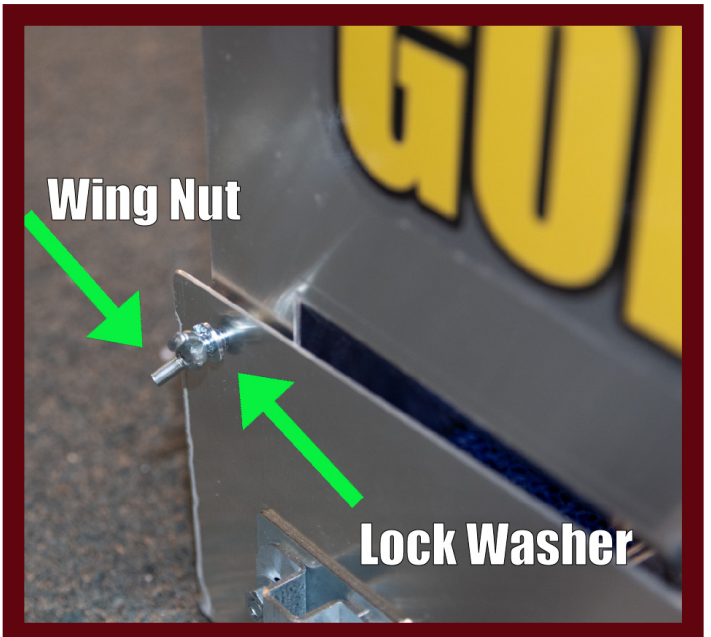



Step 3: Attach Header Box Arms

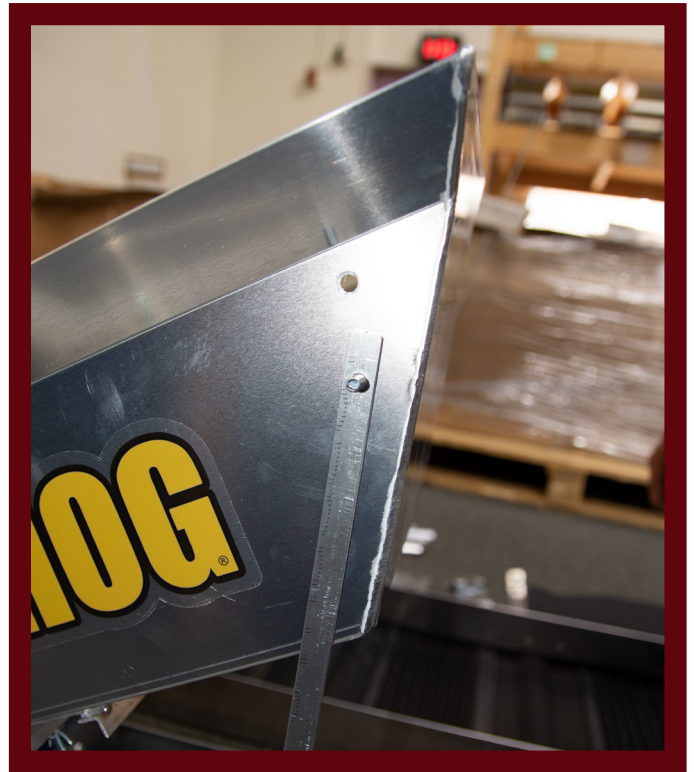

Step 4: Insert Clay Claw




Step 5: Install Plumbing

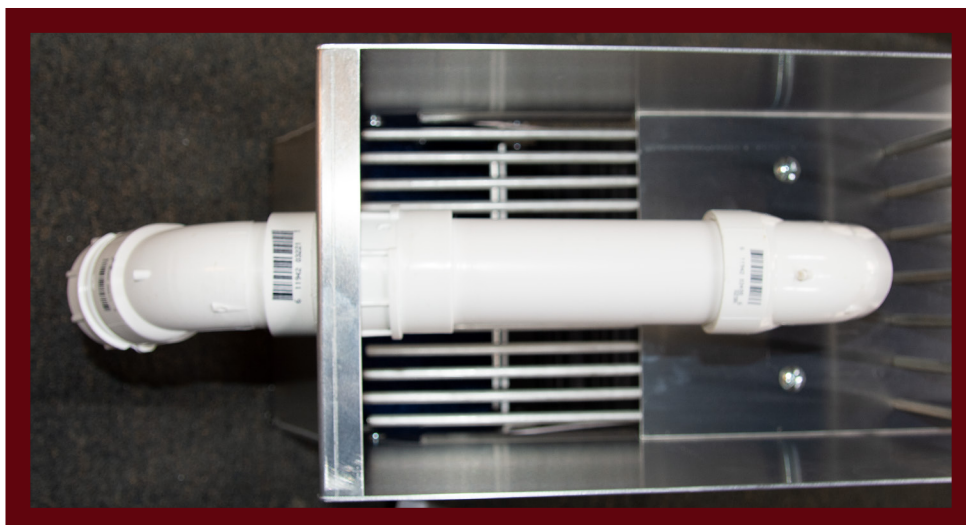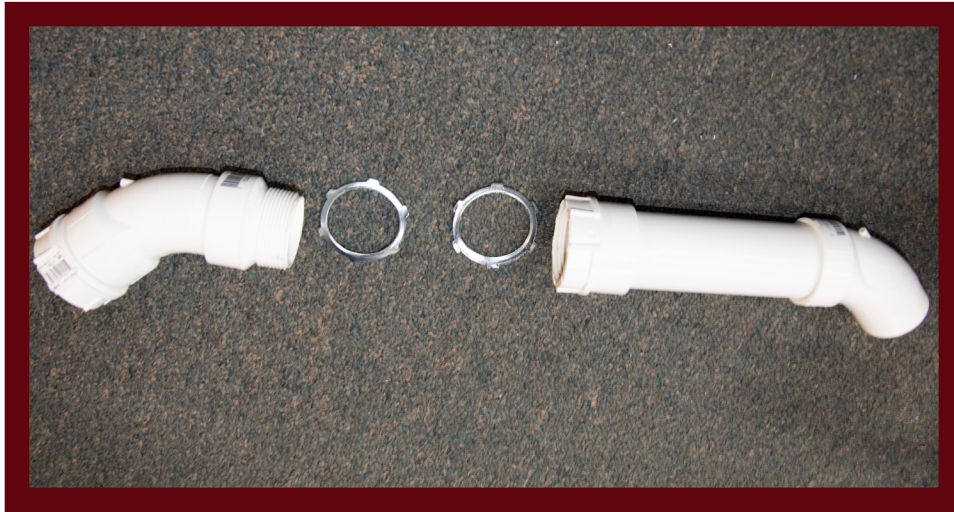

Step 6: Secure Mat and Moss with Hold Down Bar




To Run WITHOUT the Extension Attach Legs

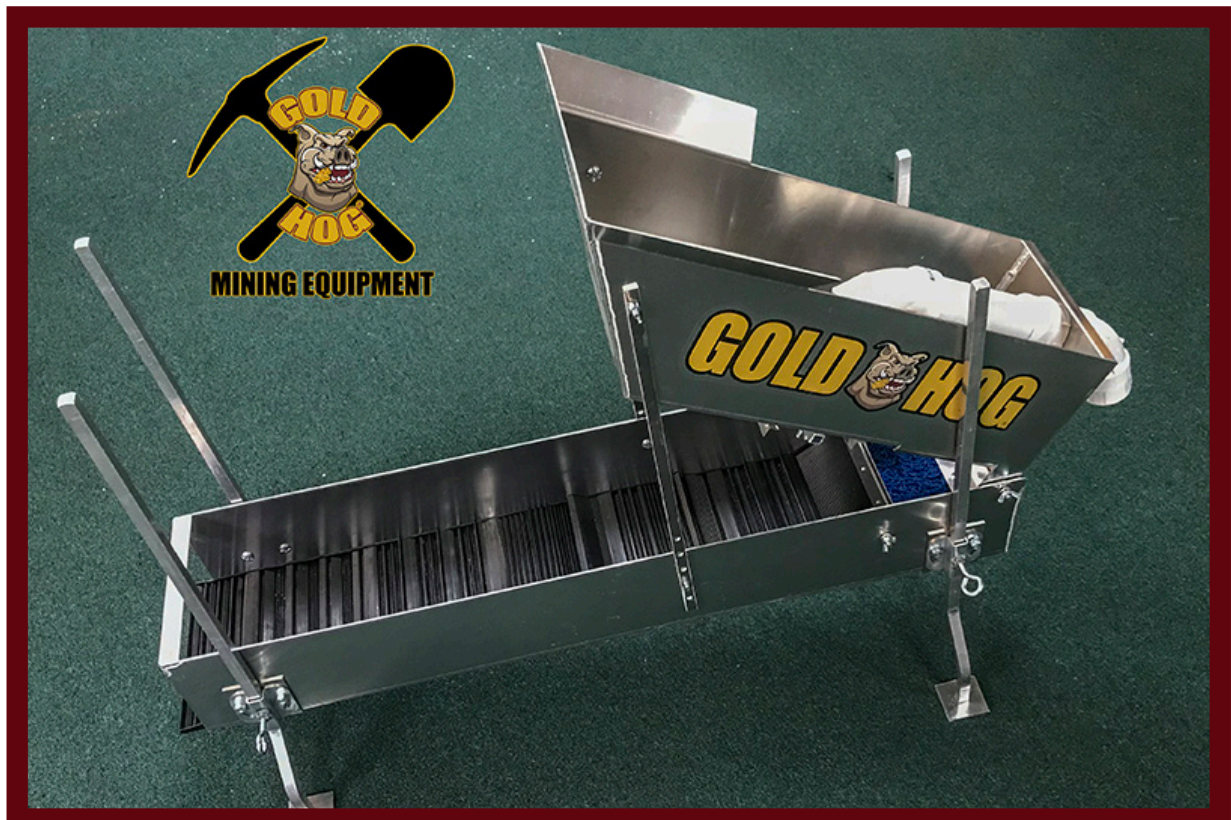

Step 7: Attach Flare Portion.



Step 8: Install Flare Flap

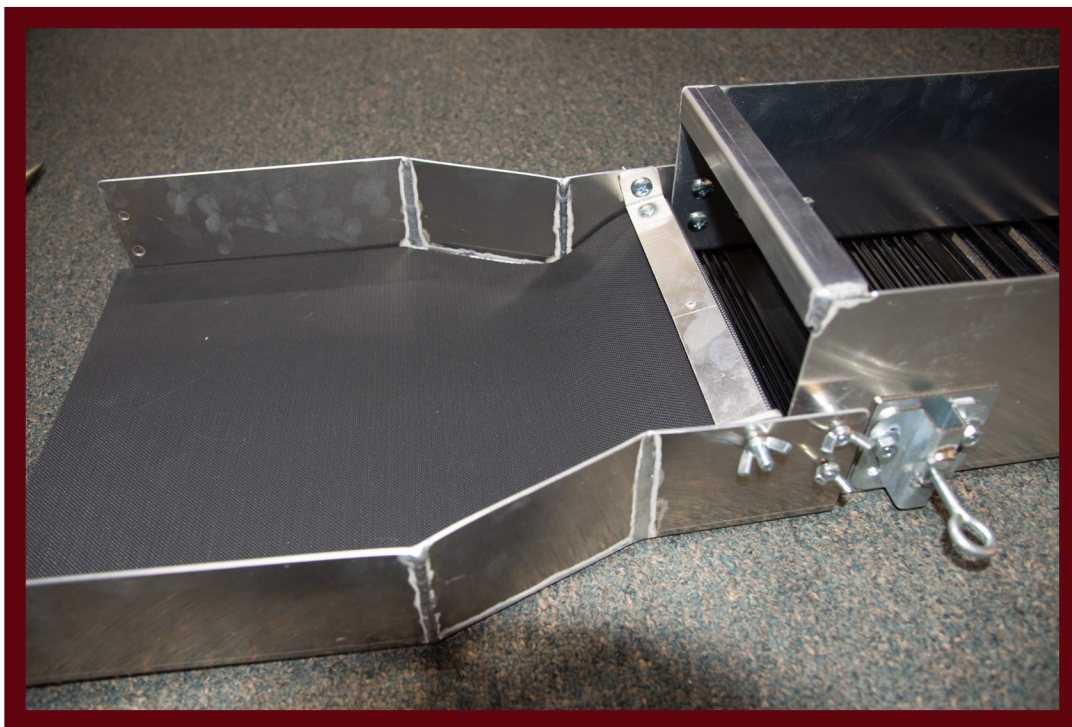

Step 9: Attach Extension



Step 10: Secure Extension Matting



Slide matting under flare lining up holes.



Insert bolt and attach with wing nut underneath.

Step 11: Attach Legs




Leg Bracket

"L" Bracket, then swivel, then washer and nut.




Insert legs and screw in eye bolts.
Do not over tighten.

Set angles and Tune

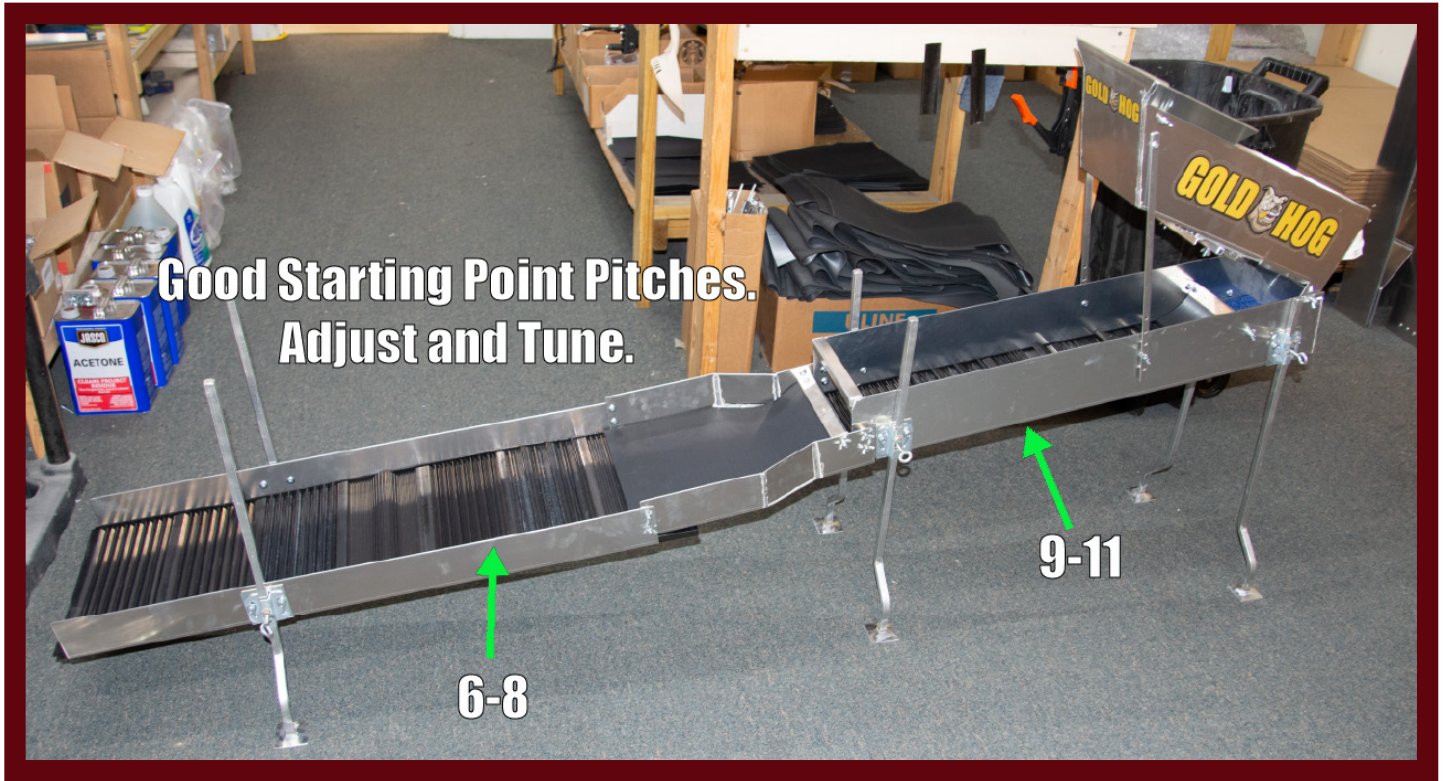

Notes

Optional Accessories
Want to upgrade your Piglet Mini?
Visit goldhog.com

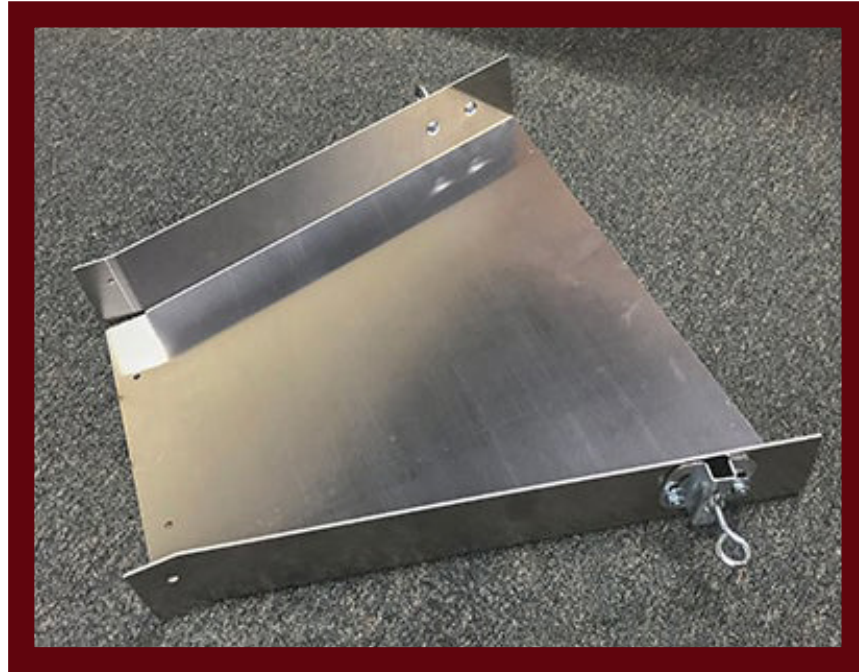

For more running tips and videos visit:
<http://www.minihighbanker.com/owners-manual/>

