
# Assembly Instructions for the Super Hog

For videos and more information about your new Super Hog please visit: https://goldhog.com/products/super-hog-highbanker/



#### **Step 1: Attaching the Grizzly Bars.**

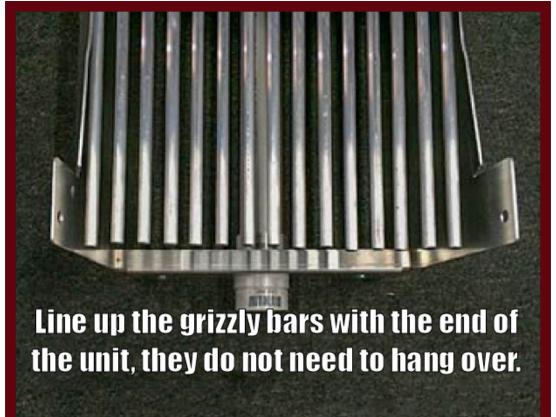



### **Step 2: Plumbing Assembly**

View looking into the header box. Slide 1.5" spray tube into female slip attachment.



Attach spray head but dont push in side elbows too tight. This will allow you to adjust in the field.

Threaded rod supports spray head.

Zip tie PVC to threaded bar.

Notice that the slot here does not go on the bar. It is for fan spray not a bar slot.

#### **Step 3: Selecting Hose Connector.**





## **Step 4: Header Box Mat Installation.**





#### **Step 5: Installing Matting and Moss in the First Tray**




#### **Step 6: Installing Lower Tray Matting**





#### **Step 7: Attaching Header Box to First Tray.**

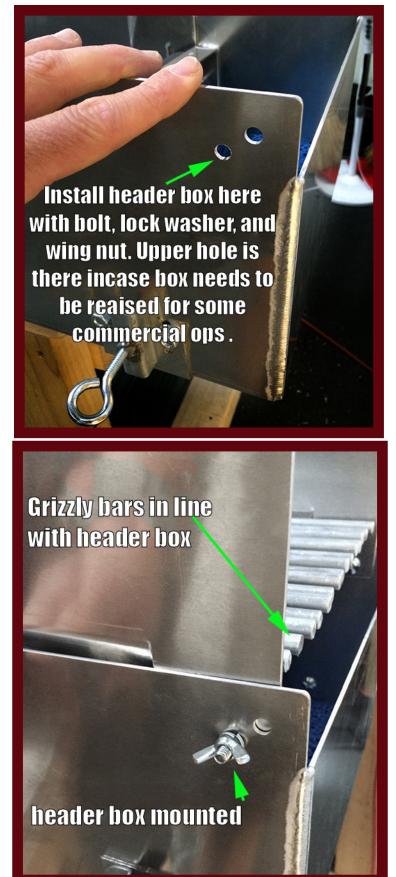

### Step 8: Attaching Leg Brackets.



#### **Step 9: Setting Safety Bracket on Header Box.**






#### Step 10: Installing the Reverse Ramp Riffle



#### **Step 11: Connect the Upper and Lower Trays**

7

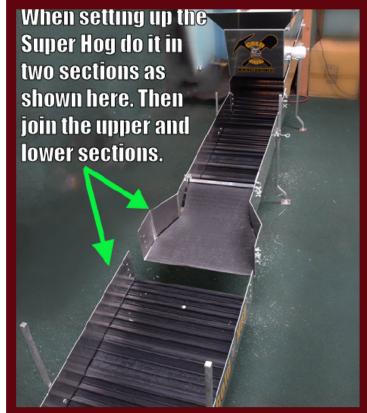

#### **Step 12: Set the Angles**






#### Notes

#### Notes

# **For more running tips and videos visit:** https://goldhog.com/products/super-hog-highbanker/

#### What happens if you "lock in" pitch positions and move to unleveled ground?

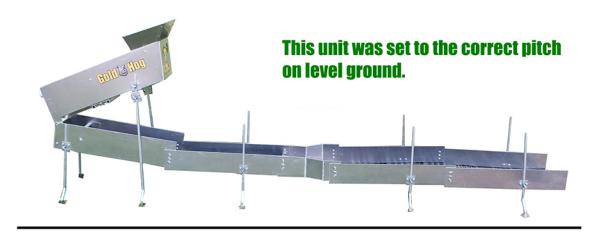

#### To get the same pitch on a down slope, you simply lower the header box end and raise the lower end with the legs.

